

B00-00 P01	Standard Grand	B00-00 P27	Supertramp Wurly	B00-00 P54	OleTime Gospel	B00-00 P83	Big Old Jupiter	B00-00 P110	Jaco Fretless
B00-00 P02	Studio Grand	B00-00 P28	FlydDarkside/Wah	B00-00 P55	FoooledAgnVox	B00-00 P84	9Yards Bass	B00-00 P111	Upright Growler
B00-00 P03	RubensteinSWComp	B00-00 P29	What'd I SayWrly	B00-00 P56	BostonScreamer	B00-00 P85	BowhSaw Bass	B00-00 P112	Levin/GabrlFrtls
B00-00 P04	Horowitz Grand	B00-00 P30	DeepFuzz Wurly	B00-00 P57	Power Pop Horns	B00-00 P86	ARPesque Bass	B00-00 P113	NYC Kits
B00-00 P05	NYC Jazz Grand	B00-00 P31	No Quarter Pnt	B00-00 P58	Sax/Trumpet Sectn	B00-00 P87	DaywalkerBassMW	B00-00 P114	LA Kits
B00-00 P06	Pop Power Piano	B00-00 P32	MistyMountain EP	B00-00 P59	BigBand/AMradio	B00-00 P88	Harpolicious	B00-00 P115	Rock Kits
B00-00 P07	ColdPliano	B00-00 P33	AcidJazzVelFlute	B00-00 P60	MeanSalsaSection	B00-00 P89	Slo QuadraPad	B00-00 P116	Roots/Indie Kit
B00-00 P08	Grand "Evans"	B00-00 P34	TimbaSynth	B00-00 P61	R&B/Funk Section	B00-00 P90	Phase Shimmer	B00-00 P117	Kikz/Snarz MW
B00-00 P09	Blues Piano 1974	B00-00 P35	Blue PVC Tubes	B00-00 P62	Bassie Orchestra	B00-00 P91	Le Pesque	B00-00 P118	EarthKikz n Snrz
B00-00 P10	Rock Piano 1974	B00-00 P36	SimpleHipHopLead	B00-00 P63	P*Funk Horns	B00-00 P92	Wispy One	B00-00 P119	Anazlog Machine
B00-00 P11	Lola Piano	B00-00 P37	Stereo TouchKoto	B00-00 P64	70s Stones Horns	B00-00 P94	Fairlight Pad	B00-00 P120	Produced Kit '08
B00-00 P12	TakeMeToThePilot	B00-00 P38	Modwheel DJ	B00-00 P66	DarkNYCStudio	B00-00 P95	Tronesque	B00-00 P121	Natural Perc
B00-00 P13	Deb's Ghost Pno	B00-00 P39	Retro Sparkle	B00-00 P67	Pop Tripper Str	B00-00 P96	So Lush Pad	B00-00 P122	Rhythm 4 Reel
B00-00 P14	Ken Brns Uprigt	B00-00 P40	RealSupasticious	B00-00 P69	Vienna Octaves	B00-00 P97	Boutique Six Str	B00-00 P123	New Marimba
B00-00 P15	SMiLE/RkyRaccoon	B00-00 P41	Joe's Clav	B00-00 P71	Pizzicato	B00-00 P98	Boutique 12 Str	B00-00 P124	2-HandSteelDrums
B00-00 P16	Piano & String	B00-00 P42	Rufus/Marley WAH	B00-00 P72	Tremolando	B00-00 P99	Emo Verser	B00-00 P125	Real Vibes
B00-00 P17	Beaten in Rhds	B00-00 P43	Black Cow Clav	B00-00 P73	Choir Complete	B00-00 P100	Voxxed Elec 12	B00-00 P126	SteamPunkMallets
B00-00 P18	Stevie's Rhds	B00-00 P44	Hiya Ground sw	B00-00 P74	Haah Singers	B00-00 P101	Real Nylon	B00-00 P127	Magic Celeste
B00-00 P19	Gilpin'sSuitcase	B00-00 P45	TrampledUnder D6	B00-00 P75	Manhattan Voices	B00-00 P102	Dual Strat	B00-00 P128	Drums 'n Bells
B00-00 P20	Duke's Dyno Rhds	B00-00 P46	Harpsichord	B00-00 P76	Aaahlicious	B00-00 P103	BurningTubes MW		
B00-00 P21	MotorBootyMutron	B00-00 P47	BriteHarpsichord	B00-00 P77	NYC in LA	B00-00 P104	Rockin' Lead MW		
B00-00 P22	Sweet Loretta EP	B00-00 P48	Gregg's B	B00-00 P78	Crystal Voices	B00-00 P105	P-Bass		
B00-00 P23	Rhds/WahSW	B00-00 P49	Real AllOut B	B00-00 P79	Airy Pad	B00-00 P106	E-Bass		
B00-00 P24	Hotrod Dyno Rhds	B00-00 P50	Clean Perc	B00-00 P80	Cathedral Vox	B00-00 P107	Beasties Bass		
B00-00 P25	WoodstockClunker	B00-00 P51	The Ninth Bar	B00-00 P81	Classic Comp	B00-00 P108	Flea/Bootsy		
B00-00 P26	Stage Mix Wurly	B00-00 P52	Lord's B3 MW	B00-00 P82	Fitty-Fitty Lead	B00-00 P109	Big Dummy		

B(Bank)の変更手順

1. FTSW"Edit"を長押し
2. KIT AUXILIARYをタップ
3. FORWARDを3回タップ
4. MSB、LSBをINCREMENT(+)、DECREMENT(-)で調整

P(Program)の変更手順

1. FTSW"Edit"を長押し
2. PROGRAMをタップ
3. カッコ内の数字をINCREMENT(+)、DECREMENT(-)で調整

B00-01 P1	Piano Stack	B00-01 P29	Crisp and Soft	B00-01 P56	VAST1-3,8&9	B00-01 P84	SynBell Morph	B00-01 P110	Lowdown Bass
B00-01 P2	Dark Grand	B00-01 P30	Soft Warm Ballad	B00-01 P57	1-Note PowerRiff	B00-01 P85	Perc>Morph>Bass	B00-01 P111	Eberhardt Frtls
B00-01 P3	Grand Piano 440	B00-01 P31	TX Stack	B00-01 P58	Miami Pop Horns	B00-01 P86	EvilOctaveWheel	B00-01 P112	Sly Bass
B00-01 P4	Piano Recital	B00-01 P32	Tight Bright FM	B00-01 P59	80sPopOctaveSax	B00-01 P87	TranceRiff	B00-01 P113	Maroon Drums
B00-01 P5	Ole Upright 1	B00-01 P33	PolyTechnobreath	B00-01 P60	BuenaVista Brass	B00-01 P88	SickoSynco	B00-01 P114	BourneRemixDrum
B00-01 P6	WestCoastPno&Pad	B00-01 P34	PianoSynth Stack	B00-01 P61	Tenor Express	B00-01 P89	Buzzy Strings	B00-01 P115	BeastieRetroDrum
B00-01 P7	Perfect PnoPad	B00-01 P36	BigSyn/HornStack	B00-01 P62	Sgt.Pepper Brass	B00-01 P90	VA1Saw/Sqr/Pulse	B00-01 P116	DryPumpin'Drums
B00-01 P8	Dreamy Piano	B00-01 P37	'70s Arena Synth	B00-01 P63	Goldfinger Brass	B00-01 P91	Airy Impact	B00-01 P117	'60s Rock&Soul
B00-01 P9	Piano w DvStrgs	B00-01 P38	'80s Arena Synth	B00-01 P64	Bari/TenorSect	B00-01 P92	Spider's Web	B00-01 P118	Headhunters Kit
B00-01 P10	PnoAgtStrngs	B00-01 P39	'90s Funk Stack	B00-01 P65	Studio A Strings	B00-01 P93	ARP Big Synth	B00-01 P119	FranticHouseDrms
B00-01 P12	DancePnoEchplex	B00-01 P40	Nexx Prog Stack	B00-01 P66	Studio B Octaves	B00-01 P94	Class Pad	B00-01 P120	Dance/Marilyn
B00-01 P13	Ivory Harp	B00-01 P41	Crisp Clav	B00-01 P69	Owen's Strings	B00-01 P95	HarmonicEnvelops	B00-01 P121	Mellow Marimba
B00-01 P14	Piano Lushness	B00-01 P42	Stevie Fuzz	B00-01 P70	Studio C Strings	B00-01 P96	Heaven & Earth	B00-01 P122	Skullophonic
B00-01 P15	Piano & Wash	B00-01 P43	HeartbreakerWAH	B00-01 P71	Tender Strings	B00-01 P97	Bling 6 String	B00-01 P123	Percussionist
B00-01 P16	Piano & Vox Pad	B00-01 P44	ChocolateSaltyClv	B00-01 P72	Toxic Strings	B00-01 P98	MediumCrunchLead	B00-01 P124	Shiny Sparkles
B00-01 P17	XfadBelltoneRhds	B00-01 P45	SailinShoes Clav	B00-01 P73	Mixed Choir	B00-01 P99	DoubleCleanChrs	B00-01 P125	HybridTuned Perc
B00-01 P18	Extreme Hardstrk	B00-01 P46	StopMakingSense	B00-01 P74	Concert Choir	B00-01 P100	Comp'd Phaser	B00-01 P126	Dynamic Perc
B00-01 P19	Fagen Phaser	B00-01 P47	Harpsi Rotovibe	B00-01 P75	Aaah Vocals	B00-01 P101	TremBucker	B00-01 P127	Cage's Ensemble
B00-01 P20	RoyalScam Rhds	B00-01 P48	PhsyclGrafitiClv	B00-01 P76	Jazzy Ballad Vox	B00-01 P102	Cascade Sitar	B00-01 P128	Magic Mbira
B00-01 P21	Austn CtyLmtsWrly	B00-01 P49	ParisCmboAccordn	B00-01 P77	AntiqueAhhChorus	B00-01 P103	Heavy Buckers		
B00-01 P22	BrightDynamicWly	B00-01 P50	WhiterShadeB3	B00-01 P78	Bright Syn Vox	B00-01 P104	Nasty'70s Guitar		
B00-01 P23	'70sWahLeslieEP	B00-01 P51	Doors Vox	B00-01 P79	Vox Orgel	B00-01 P105	Finger Bass		
B00-01 P25	Classic DX Rhds	B00-01 P52	Indagardenoveden	B00-01 P80	Vox & Strings	B00-01 P106	KneeDeepMinimoog		
B00-01 P26	Rich EP+Pad	B00-01 P53	Animals Vox	B00-01 P81	Press Lead	B00-01 P107	AC Buzzer Bass		
B00-01 P27	90's FM Shimmer	B00-01 P54	Magic Wolf	B00-01 P82	ClassSquare	B00-01 P108	Motown Bass		
B00-01 P28	Bright HardstrEP	B00-01 P55	Farfisa 1	B00-01 P83	ARP2500 Brass	B00-01 P109	Squire'sHeavyPik		

B(Bank)の変更手順

1. FTSW"Edit"を長押し
2. KIT AUXILIARYをタップ
3. FORWARDを3回タップ
4. MSB、LSBをINCREMENT(+)、DECREMENT(-)で調整

P(Program)の変更手順

1. FTSW"Edit"を長押し
2. PROGRAMをタップ
3. カッコ内の数字をINCREMENT(+)、DECREMENT(-)で調整

B00-02 P17	VA1 Saw Lead	B00-02 P59	ElectroPercSynth	B00-03 P1	Winds & Strings	B00-03 P51	Solo Clarinet	B00-03 P77	Trombone Section	B00-03 P103	Soft Stops
B00-02 P18	VA1 Sqr Lead	B00-02 P60	MWhIMayhemBass	B00-03 P2	Winds, Horn & Str	B00-03 P52	Slo OrchClarinet	B00-03 P78	Dyn Orch Bones	B00-03 P104	All Stops
B00-02 P19	MaroonSynBass	B00-02 P61	ElectronicaSplit	B00-03 P4	LH Timp Roll Orch	B00-03 P53	Fast Orch Clar	B00-03 P79	Bari Horn Section	B00-03 P105	Chapel Organ
B00-02 P20	VA1DistBassSolo!	B00-02 P62	HiPassMWhIBlips	B00-03 P7	Poltergeist Trem	B00-03 P54	Lead Clarinet	B00-03 P80	Dyn Bari Horns	B00-03 P106	AllStops AllVox
B00-02 P21	DownwardSpiralMW	B00-02 P63	Plasma Cannon	B00-03 P9	Pizz w/PercUpTop	B00-03 P55	Solo Bassoon	B00-03 P81	Solo Tuba	B00-03 P107	Pipes & Voices
B00-02 P22	VA1DstPulseWheel	B00-02 P64	32 Layer Bass!	B00-03 P11	Fast Winds &Pizz	B00-03 P56	Solo Bassoon vib	B00-03 P82	Dyn Orch Tuba	B00-03 P108	Orch Timpani
B00-02 P24	VA1 DetunedPulse	B00-02 P104	St.P PWM BASS	B00-03 P24	Strings & Silver	B00-03 P57	Solo Dbl Reeds	B00-03 P83	Low Orch Brass	B00-03 P109	Solo Timpani
B00-02 P25	VA1 Detuned Saws	B00-02 P105	SquareChirpLead	B00-03 P25	Reeds & Bells	B00-03 P58	Woodwind Section	B00-03 P84	Low Brass Chorale	B00-03 P110	Tam/Cym/BD/Timp
B00-02 P26	VA1 Detuned Sqrs	B00-02 P110	Synbrass Pillow	B00-03 P26	Perc Atk Strings	B00-03 P59	Ensemble WWinds	B00-03 P85	Fast Orch Brass	B00-03 P111	Basic Orch Perc
B00-02 P27	VA1 Emerson Lead	B00-02 P113	Outkast Drums	B00-03 P29	Orch w/ Bells On	B00-03 P60	BassClar/Clar/Fl	B00-03 P86	Brass Fanfare	B00-03 P112	Timp & Aux Perc
B00-02 P28	MwhlClubsweeper	B00-02 P114	PopRock'08 Kit	B00-03 P31	Horns,Winds&Str	B00-03 P61	Solo Fr Horn	B00-03 P87	Dyn Orch Trumpets	B00-03 P113	Temple Blocks
B00-02 P29	Innervate	B00-02 P115	Hello Brooklyn	B00-03 P34	StBaroque Harpsi	B00-03 P62	Ensemble Fr Horn	B00-03 P88	Solo Violin fast	B00-03 P114	Modern Blockery
B00-02 P30	ChemBrosBassLead	B00-02 P116	Snoop Kit	B00-03 P35	String Continuo	B00-03 P63	Lead French Horn	B00-03 P89	Folk Violin slow	B00-03 P115	Perc & Blocks
B00-02 P31	UFO Pad	B00-02 P117	EpicRemixDrums	B00-03 P38	Fifes & Drums	B00-03 P64	Dyn Orch Fr Horns	B00-03 P90	Solo Viola fast	B00-03 P116	Stereo Tam-tam
B00-02 P32	VA1SliderMorphSQ	B00-02 P118	ZooYorkRemixDrms	B00-03 P39	Solo Flute	B00-03 P65	HornSect Layer	B00-03 P91	Solo Viola slow	B00-03 P117	Cymbal Roll Tr
B00-02 P48	Preston SpaceWah	B00-02 P119	Roc-A-Fella Kit	B00-03 P40	Tremolo Flute	B00-03 P66	Solo BrtTrumpet	B00-03 P92	Solo Cello fast	B00-03 P118	Xylophone
B00-02 P49	Analog/DigHybrid	B00-02 P120	Breakestra Kit	B00-03 P41	Fast Orch Flute	B00-03 P67	Hard Trumpet	B00-03 P93	Solo Cello slow	B00-03 P119	Solo Marimba
B00-02 P50	Jump! Obx	B00-02 P122	DigitalMoonscape	B00-03 P42	Piccolo	B00-03 P68	Lead Trumpet	B00-03 P94	Solo Basso 1	B00-03 P120	Orch Marimba
B00-02 P51	'80s End Credits	B00-02 P123	Falgor'sLament	B00-03 P43	Solo Oboe	B00-03 P69	Soft Trumpet	B00-03 P95	Solo Basso 2 slo	B00-03 P121	Vibraphone
B00-02 P52	VA1Distlead CC	B00-02 P124	BPM BionicStrngs	B00-03 P44	Slow Oboe	B00-03 P70	Slow Soft Trp	B00-03 P96	String Quartet	B00-03 P122	Celeste
B00-02 P53	Divider	B00-02 P127	MeanStereoSweep	B00-03 P45	Fast Orch Oboe	B00-03 P71	Two Lead Trumpets	B00-03 P97	Solo Harp	B00-03 P123	Glockenspiel
B00-02 P54	Mono Trekkies	B00-02 P128	PulseVowel	B00-03 P46	Lead Oboe	B00-03 P72	Lead MuteTrumpet	B00-03 P98	Orch Harp 1	B00-03 P124	Chimes/Glock
B00-02 P55	Disco Divebomb			B00-03 P47	Solo Eng Hrn prs	B00-03 P73	Solo Tenor Sax	B00-03 P99	Delicate Harp	B00-03 P125	Bells Across
B00-02 P56	MutronTweetyPerc			B00-03 P48	Fast Orch EngHrn	B00-03 P74	Sax,Horns,MuteTrp	B00-03 P100	HarpArps & Gliss	B00-03 P126	CelesteGlockHarp
B00-02 P57	Disgusting Bass			B00-03 P49	Slow EngHorn prs	B00-03 P75	Solo Trombone	B00-03 P101	Slo Orch Chorus	B00-03 P127	Chime Bell
B00-02 P58	VA1ShaperSweeper			B00-03 P50	Lead English Horn	B00-03 P76	Ens Trombone	B00-03 P102	Pipe Stops	B00-03 P128	Carillon

B(Bank)の変更手順

1. FTSW"Edit"を長押し
2. KIT AUXILIARYをタップ
3. FORWARDを3回タップ
4. MSB、LSBをINCREMENT(+)、DECREMENT(-)で調整

P(Program)の変更手順

1. FTSW"Edit"を長押し
2. PROGRAMをタップ
3. カッコ内の数字をINCREMENT(+)、DECREMENT(-)で調整

B00-04 P1	Kit 1 Open Rock	B00-04 P26	Kit 26 Boxy Tubs	B00-04 P51	Kit 51 Jersey	B00-04 P76	Aud Kik/Sn Streo	B00-04 P102	PERC KatManDude
B00-04 P2	Kit 2 SquashRock	B00-04 P27	Kit 27 West Boxy	B00-04 P52	Kit 52 HardKnock	B00-04 P77	Stereo KickDrums	B00-04 P103	PERC PolyRitmico
B00-04 P3	Kit 3 Full Room	B00-04 P28	Kit 28 Big Buzz	B00-04 P53	Kit 53 CoralBox	B00-04 P78	Mono Kick Drums	B00-04 P104	PERC Carnival
B00-04 P4	Kit 4 East Space	B00-04 P29	Kit 29 Schnizzle	B00-04 P54	Kit 54 Cold Cash	B00-04 P79	StereoSnareDrums	B00-04 P105	HIT'n Rung 1
B00-04 P5	Kit 5 CopperRing	B00-04 P30	Kit 30 Bonzo'sRm	B00-04 P55	Kit 55 Spooge	B00-04 P80	Mono Snare Drums	B00-04 P106	HIT'n Rung 2
B00-04 P6	Kit 6 Birch Wood	B00-04 P31	Kit 31 Old Traps	B00-04 P56	Kit 56 DJ-Dub	B00-04 P81	Tom-toms	B00-04 P107	HIT'n Rung 3
B00-04 P7	Kit 7 DeadRocker	B00-04 P32	Kit 32 Fat Boy	B00-04 P57	Kit 57 Beatbx101	B00-04 P82	Hi-hats	B00-04 P108	HIT'n Rung Keys
B00-04 P8	Kit 8 Ring-tone	B00-04 P33	Kit 33 ModernRok	B00-04 P58	Kit 58 Rhythmcon	B00-04 P83	Rdes&Crshs&Rolls	B00-04 P109	KEY SoftBars
B00-04 P9	Kit 9 Gadd'sLair	B00-04 P34	Kit 34 80'sPower	B00-04 P59	Kit 59 Superfly	B00-04 P84	E Perc/SoundFX	B00-04 P110	KEY XyLoomBa
B00-04 P10	Kit 10 Hinomaru	B00-04 P35	Kit 35 WoolyPckt	B00-04 P60	Kit 60 Lay Down	B00-04 P85	Vocal Percussion	B00-04 P111	KEY Asian Metal
B00-04 P11	Kit 11 KirkeeB 1	B00-04 P36	Kit 36 Reso-King	B00-04 P61	Kit 61 TrashFunk	B00-04 P86	Drum Percussion	B00-04 P112	KEY TablaBars
B00-04 P12	Kit 12 25thAnniv	B00-04 P37	Kit 37 Los Feliz	B00-04 P62	Kit 62 RadioEcho	B00-04 P87	WoodMetlShakPerc	B00-04 P113	KEY SlitBars
B00-04 P13	Kit 13 LA A Kit1	B00-04 P38	Kit 38 Mahogany	B00-04 P63	Kit 63 TouchTone	B00-04 P88	VRT Accessory A	B00-04 P114	KEY GourdBars
B00-04 P14	Kit 14 LA A Kit2	B00-04 P39	Kit 39 80's PTS	B00-04 P64	Kit 64 Sweeper	B00-04 P89	VRT Accessory B	B00-04 P115	KEY MamboBars
B00-04 P15	Kit 15 LA A Kit3	B00-04 P40	Kit 40 FabFringe	B00-04 P65	Kit 65 ScratchMe	B00-04 P90	VRT Accessory C	B00-04 P116	MIXnMatch Perc1
B00-04 P16	Kit 16 LA B Kit1	B00-04 P41	Kit 41 LouStools	B00-04 P66	Kit 66 Ice Heart	B00-04 P91	VRT BongoConga	B00-04 P117	MIXnMatch Perc2
B00-04 P17	Kit 17 LA B Kit2	B00-04 P42	Kit 42 Orngcrush	B00-04 P67	Kit 67 ChakraJam	B00-04 P92	VRT Bendir	B00-04 P118	MIXnMatch Perc3
B00-04 P18	Kit 18 LA B Kit3	B00-04 P43	Kit 43 Static	B00-04 P68	Kit 68 Voice Box	B00-04 P93	VRT Bodhran	B00-04 P119	MIXnMatch Perc4
B00-04 P19	Kit 19 Pomele	B00-04 P44	Kit 44 LiteBrite	B00-04 P69	Kit 69 6 Mil\$Man	B00-04 P94	VRT BodhrnBendir	B00-04 P120	ATM HoldnSlide
B00-04 P20	Kit 20 KirkeeB 2	B00-04 P45	Kit 45 Brush 1	B00-04 P70	Strange Hits	B00-04 P95	VRT Djembe	B00-04 P121	ATM Birdy Birdy
B00-04 P21	Kit 21 J Geils	B00-04 P46	Kit 46 Brush 2	B00-04 P71	Strange Hits2	B00-04 P96	VRT DumbekDjembe	B00-04 P122	ATM SacredShrine
B00-04 P22	Kit 22 Tightie	B00-04 P47	Kit 47 PillowFuz	B00-04 P72	VinylNoyzComboMW	B00-04 P97	VRT FrameDrums	B00-04 P123	ATM Tera Nova
B00-04 P23	Kit 23 Low Rock	B00-04 P48	Kit 48 Thigpen	B00-04 P73	Recrd Start/Stop	B00-04 P98	VRT FrameHybrid	B00-04 P124	ATM Oody Oody
B00-04 P24	Kit 24 Drum&Bass	B00-04 P49	Kit 49 Fnessence	B00-04 P74	5 Kits Temple 1	B00-04 P99	VRT Gourd	B00-04 P125	ATM FlexiCrotale
B00-04 P25	Kit 25 Flabby	B00-04 P50	Kit 50 Proc Pop	B00-04 P75	Aud Kik/Snr Mono	B00-04 P100	VRT Tabla	B00-04 P126	ATM Bit'aGlitter
						B00-04 P101	VRT TalkingDrum	B00-04 P127	ATM Drip'nGlittr

B(Bank)の変更手順

1. FTSW"Edit"を長押し
2. KIT AUXILIARYをタップ
3. FORWARDを3回タップ
4. MSB、LSBをINCREMENT(+)、DECREMENT(-)で調整

P(Program)の変更手順

1. FTSW"Edit"を長押し
2. PROGRAMをタップ
3. カッコ内の数字をINCREMENT(+)、DECREMENT(-)で調整

B00-05 P1	Brt Natural Kit	B00-05 P26	AngryBastard Kit	B00-05 P52	Backsweep Kit	B00-05 P78	Coliseum Kit
B00-05 P2	SmoothRocker Kit	B00-05 P27	Vibra Lunch Kit	B00-05 P53	Bug Zapper Kit	B00-05 P79	RipperKit1
B00-05 P3	Low Rocker Kit	B00-05 P28	Ricochet Kit	B00-05 P54	Elektro Sand Kit	B00-05 P80	TripTrash
B00-05 P4	SuperNatural Kit	B00-05 P29	Frida's Gate Kit	B00-05 P55	Sandy Bott'm Kit	B00-05 P81	Beatbox2
B00-05 P5	Big Woosh Kit	B00-05 P30	Metallic Cut Kit	B00-05 P56	Box o' Sand Kit	B00-05 P82	SumpKit1 MWSus
B00-05 P6	Fat Nat Kit	B00-05 P31	Cannibal Kit	B00-05 P57	Fine Grit Kit	B00-05 P83	ElectroKit2MW
B00-05 P7	Abe Junior Kit	B00-05 P32	Tunnel Feel Kit	B00-05 P58	Matchmaker Kit	B00-05 P84	Paper Tom
B00-05 P8	Charlemagne Kit	B00-05 P33	Tuna Slap Kit	B00-05 P59	Zucchinni Kit	B00-05 P86	GlubFlangeKit
B00-05 P9	H-Fact Kit	B00-05 P34	Plywood Kit	B00-05 P60	Pump da Well Kit	B00-05 P87	DryFattyKit
B00-05 P10	SoftCookie Kit	B00-05 P35	Door Knocker Kit	B00-05 P61	L'trk Reflux Kit	B00-05 P88	Drums w Bass 1
B00-05 P11	Brushes Kit	B00-05 P36	Slapstick Kit	B00-05 P62	Squash Clap Kit	B00-05 P90	GateClapDrmLE
B00-05 P12	HipgigJunior Kit	B00-05 P37	Scratchbox Kit	B00-05 P63	Scoopit Up Kit	B00-05 P91	Dub Kit
B00-05 P13	Cocktail Kit	B00-05 P38	Anvil Head Kit	B00-05 P64	Tone Keeper Kit	B00-05 P92	Rock Room Drums
B00-05 P14	BeatBoxBrush Kit	B00-05 P39	Cat Scratch Kit	B00-05 P65	Phase "E" Kit	B00-05 P93	ResNoise Kit
B00-05 P15	Jinglehop Kit	B00-05 P40	Scream Kit	B00-05 P66	Straw Blow Kit	B00-05 P94	144ms Gated Kit
B00-05 P16	Tiny Bopper Kit	B00-05 P41	Mangled Kit	B00-05 P67	Falling Star Kit	B00-05 P95	FatNoise Kit
B00-05 P17	Move'n Air Kit	B00-05 P42	Rawhide Kit	B00-05 P68	Super Ball Kit	B00-05 P96	Hypd Natural Kit
B00-05 P18	Ali's Punch Kit	B00-05 P43	Shrugie Kit	B00-05 P69	Pixie Dust Kit	B00-05 P97	Rango Kit
B00-05 P19	Rock Trance Kit	B00-05 P44	Big Dog Kit	B00-05 P70	Air Waves Kit	B00-05 P98	NoiseSlapToms
B00-05 P20	Ringling Pop Kit	B00-05 P45	Sweeper Kit	B00-05 P71	Tub Floater Kit	B00-05 P99	16LayerCake Kit
B00-05 P21	Marley Kit	B00-05 P46	Gravel Dump Kit	B00-05 P72	Why Not Kit	B00-05 P100	HopRoom Kit
B00-05 P22	L'tric Nat Kit	B00-05 P47	Mudflap Kit	B00-05 P73	Turntablism Kit	B00-05 P101	Natural Ringer
B00-05 P23	TrashPanTom Kit	B00-05 P48	Mud Slinger Kit	B00-05 P74	Stud3and4C	B00-05 P102	BeachGroover
B00-05 P24	Tin Man Kit	B00-05 P49	Shrug's Bros'Kit	B00-05 P75	RadKings3	B00-05 P103	Rock Snarer
B00-05 P25	Cheapo Dist Kit	B00-05 P50	Wet Sponge Kit	B00-05 P76	ResonantTraps	B00-05 P104	Drum Pad Kit 1

B(Bank)の変更手順

1. FTSW"Edit"を長押し
2. KIT AUXILIARYをタップ
3. FORWARDを3回タップ
4. MSB、LSBをINCREMENT(+)、DECREMENT(-)で調整

P(Program)の変更手順

1. FTSW"Edit"を長押し
2. PROGRAMをタップ
3. カッコ内の数字をINCREMENT(+)、DECREMENT(-)で調整

B00-06 P1	FM E Piano 1	B00-06 P27	16' Open Flute	B00-06 P53	4' Reed	B00-06 P79	Soft Marimba
B00-06 P2	FM E Piano 2	B00-06 P28	16' Stop Flute	B00-06 P54	4' Gamba	B00-06 P80	Subtle Marimba
B00-06 P3	Hybrid DX & Pad	B00-06 P29	16' Diapason	B00-06 P55	4' DiaCeleste	B00-06 P81	Rubber Marimba
B00-06 P4	FluidStradaGtr	B00-06 P30	16' Ped Bourdon	B00-06 P56	4' Ballpark Stop	B00-06 P82	Marimba Squash
B00-06 P5	Fluid E Gtr	B00-06 P31	16' Ped Diapason	B00-06 P57	4' Viol	B00-06 P83	Cold Marimba
B00-06 P6	OrganWaveComper	B00-06 P32	16' Ped Reed	B00-06 P58	2 2/3' OpenFlute	B00-06 P84	Double Marimba
B00-06 P7	Poly Brassy	B00-06 P33	16' Reed A	B00-06 P59	2 2/3' StopFl 12	B00-06 P85	Marimba Echos
B00-06 P8	SynBrass Comper	B00-06 P34	16' Reed B	B00-06 P60	2 2/3' Diapason	B00-06 P86	Canyon Marimba
B00-06 P9	PolyPitch Brass	B00-06 P35	16' Gamba	B00-06 P61	2 2/3' Reed	B00-06 P87	Marimba Abyss
B00-06 P10	Poly Sweep 2	B00-06 P36	16' DiaCeleste	B00-06 P62	22/3' Gamba	B00-06 P88	Vibe Dream
B00-06 P11	Scat Vocals	B00-06 P37	16' Ballpark Sto	B00-06 P63	2 2/3' DiaCelest	B00-06 P89	Mello Vibraphone
B00-06 P12	Scat Choir	B00-06 P38	16' Viol	B00-06 P64	22/3' Ballpark S	B00-06 P90	Thick Vibes
B00-06 P13	FM SqareBell	B00-06 P39	8' Open Flute	B00-06 P65	2 2/3' Viol	B00-06 P91	Creamy Vibes
B00-06 P14	Toot Lead	B00-06 P40	8' Stop Flute	B00-06 P66	2' Open Flute	B00-06 P92	Golden Vibes
B00-06 P15	WetToot	B00-06 P41	8' Diapason	B00-06 P67	2' Stop Flute	B00-06 P93	Chorus Vibes
B00-06 P16	LegatoBrassyLead	B00-06 P42	8' Ped Bourdon	B00-06 P68	2' Diapason	B00-06 P94	Vibes in Phase
B00-06 P17	Treble FM Lead	B00-06 P43	8' Reed	B00-06 P69	2' Reed	B00-06 P95	Vibe Trance
B00-06 P18	Delicate FM Lead	B00-06 P44	8' Gamba	B00-06 P70	2' Gamba	B00-06 P96	Surreal Vibes
B00-06 P19	Micromoog Plus	B00-06 P45	8' DiaCeleste	B00-06 P71	2' DiaCeleste	B00-06 P97	Cyrstal Vibes
B00-06 P20	Deep Vox Bed	B00-06 P46	8' Ballpark Stop	B00-06 P72	2' Ballpark Stop	B00-06 P98	BriteSwirl Vibes
B00-06 P21	SloSynOrch Wet	B00-06 P47	8' Viol	B00-06 P73	2' Viol		
B00-06 P22	Vox Bed 2	B00-06 P48	51/3' Ped Bourd.	B00-06 P74	Rich Marimba		
B00-06 P23	Hi Vox Cloud	B00-06 P49	4' Open Flute	B00-06 P75	Tempered Marimb		
B00-06 P24	LFO Pitcher Pad	B00-06 P50	4' Stop Flute	B00-06 P76	Lonely Marimba		
B00-06 P25	MagicChinaFlower	B00-06 P51	4' Diapason	B00-06 P77	Marimba Plate		
B00-06 P26	Climax Perc	B00-06 P52	4' Ped Bourdon	B00-06 P78	Thick Flt Marimb		

B(Bank)の変更手順

1. FTSW"Edit"を長押し
2. KIT AUXILIARYをタップ
3. FORWARDを3回タップ
4. MSB、LSBをINCREMENT(+)、DECREMENT(-)で調整

P(Program)の変更手順

1. FTSW"Edit"を長押し
2. PROGRAMをタップ
3. カッコ内の数字をINCREMENT(+)、DECREMENT(-)で調整

B00-07 P1	Ezra's Burner	B00-07 P28	Wah B3+EchoplX	B00-07 P54	LeeMichaelsB3	B00-07 P94	12SAWMWheelLead	B00-07 P120	Cars Square Lead
B00-07 P2	HotTubeGospel	B00-07 P29	Sweet n Nice	B00-07 P55	GM Standard Kit	B00-07 P95	HotMalletMWheel	B00-07 P121	Data Shape Saw
B00-07 P3	B3 Midrange	B00-07 P30	Soft Chords	B00-07 P56	GM Room Kit	B00-07 P96	ScreaminWhlBass	B00-07 P122	Saw+Mogue 4Pole
B00-07 P4	Blues&Gospel	B00-07 P31	SputtringingB3	B00-07 P57	GM Power Kit	B00-07 P97	SyncWheelLead	B00-07 P123	VA1NakedPWMPoly
B00-07 P5	Prog B3 Perc2	B00-07 P32	Melvin C.	B00-07 P58	GM Elec Kit	B00-07 P98	ModwheelKotoSyn	B00-07 P124	VA1NakedPWMMono
B00-07 P6	Prog B3 Perc3	B00-07 P33	All Out	B00-07 P59	GM Synth Kit	B00-07 P99	VASprSaw	B00-07 P125	VA1NakedSawPoly
B00-07 P7	Tube B3 Perc	B00-07 P34	J's Comper	B00-07 P60	GM Jazz Kit	B00-07 P100	VASprSaw+Allpass	B00-07 P126	VA1NakedSqrPoly
B00-07 P8	Prog B3 Perc4	B00-07 P35	Brother Jack	B00-07 P61	GM Brush Kit	B00-07 P101	Silent Program	B00-07 P127	VA1NakedSqrMono
B00-07 P9	BrgtTubeScream	B00-07 P36	Model One	B00-07 P62	GM Orch Kit	B00-07 P102	Click Track	B00-07 P128	VA1NakedSawMono
B00-07 P10	Zepelin Solo	B00-07 P37	Thick Gospel	B00-07 P63	VAST1-3Ch/Perc	B00-07 P103	Default Program		
B00-07 P11	Argent B3	B00-07 P38	Growler B	B00-07 P64	VAST1-3 Ch/Perc2	B00-07 P104	Diagnostic Sine		
B00-07 P12	MusselShoalsB3	B00-07 P39	Ready 2 Rock	B00-07 P65	Fisher's VAST B3	B00-07 P105	Propht V Sync Ld		
B00-07 P13	XtremTubeB3Prc	B00-07 P40	Thimmer	B00-07 P74	Blues Harmonica	B00-07 P106	Tempo SyncPulse		
B00-07 P14	Classic Traffic	B00-07 P41	The Real ABC	B00-07 P75	WheelBowCello	B00-07 P107	Slo Syn Orch		
B00-07 P15	Warm B3	B00-07 P42	GospelSpecial	B00-07 P76	WheelBowViola	B00-07 P108	Anabrass		
B00-07 P16	Warmer B3	B00-07 P43	In The Corner	B00-07 P77	WheelBowFiddle	B00-07 P109	Fat Syn Orch		
B00-07 P17	ChrsEchoOrgan	B00-07 P44	NightBaby	B00-07 P78	Electric Cello	B00-07 P110	WheelGrowlMooguo		
B00-07 P18	SlowPhaseOrgan	B00-07 P45	Gimme Some	B00-07 P82	Classic MiniBass	B00-07 P111	The Way It Is		
B00-07 P20	Lord'sDirtBomb	B00-07 P46	The Grinder	B00-07 P83	TalkWahPoly+Syn	B00-07 P112	AlphaCentauri		
B00-07 P21	Mellow Mitch	B00-07 P47	Mean Bean	B00-07 P84	MeanWahMono	B00-07 P113	SynOrcWhaleCall		
B00-07 P22	Sly's Revenge	B00-07 P48	Dew Dropper	B00-07 P85	Bass Pedal	B00-07 P114	Downes Lead		
B00-07 P23	LateNighter	B00-07 P49	Two Out	B00-07 P86	SyncSqr Template	B00-07 P115	Minipulse 4Pole		
B00-07 P24	FirebreatheC3	B00-07 P50	J's All Out	B00-07 P87	CarpenterSndtrck	B00-07 P116	BPM Lead		
B00-07 P25	Mr Smith	B00-07 P51	My Sunday	B00-07 P89	PannerTemplate	B00-07 P117	GatedSqrSweepBPM		
B00-07 P26	Errol G.	B00-07 P52	Good Starter	B00-07 P92	Candy*O SyncLead	B00-07 P118	BPMechplexPad		
B00-07 P27	Testify	B00-07 P53	Sacrificer	B00-07 P93	WheelSyncBlips	B00-07 P119	GatedNoisweepBPM		

B(Bank)の変更手順

1. FTSW"Edit"を長押し
2. KIT AUXILIARYをタップ
3. FORWARDを3回タップ
4. MSB、LSBをINCREMENT(+)、DECREMENT(-)で調整

P(Program)の変更手順

1. FTSW"Edit"を長押し
2. PROGRAMをタップ
3. カッコ内の数字をINCREMENT(+)、DECREMENT(-)で調整

B00-32 P1	GM Piano 1	B00-32 P27	Jazz Guitar	B00-32 P53	Choir Aahs	B00-32 P79	Whistle	B00-32 P105	Sitar
B00-32 P2	Bright Grand	B00-32 P28	Clean E Gtr	B00-32 P54	Voice Oohs	B00-32 P80	Ocarina	B00-32 P106	Banjo
B00-32 P3	Electric Grand	B00-32 P29	Muted Guitar	B00-32 P55	Synth Vox	B00-32 P81	Square Wave	B00-32 P107	Shamisen
B00-32 P4	Honky-Tonk Pno	B00-32 P30	Overdrive Gtr	B00-32 P56	Orchestra Hit	B00-32 P82	Sawtooth Wave	B00-32 P108	Koto
B00-32 P5	Elec Piano 1	B00-32 P31	Distorted Gtr	B00-32 P57	Trumpet	B00-32 P83	Synth Calliope	B00-32 P109	Kalimba
B00-32 P6	Elec Piano 2	B00-32 P32	Gtr Harmonics	B00-32 P58	Trombone	B00-32 P84	Chiffer Lead	B00-32 P110	Bagpipe
B00-32 P7	Harpsichord	B00-32 P33	Acoustic Bass	B00-32 P59	Tuba	B00-32 P85	Charang	B00-32 P111	Fiddle
B00-32 P8	Clavinet	B00-32 P34	Finger Bass	B00-32 P60	Muted Trumpet	B00-32 P86	Solo Vox	B00-32 P112	Shanai
B00-32 P9	GM Celesta	B00-32 P35	Picked Bass	B00-32 P61	French Horn	B00-32 P87	5th Saw Wave	B00-32 P113	Tinkle Bell
B00-32 P10	Glockenspiel	B00-32 P36	Fretless Bass	B00-32 P62	Brass Section	B00-32 P88	Bass & Lead	B00-32 P114	Agogo
B00-32 P11	Music Box	B00-32 P37	Slap Bass 1	B00-32 P63	Synth Brass 1	B00-32 P89	Fantasia	B00-32 P115	Steel Drums
B00-32 P12	Vibraphone	B00-32 P38	Slap Bass 2	B00-32 P64	Synth Brass 2	B00-32 P90	Warm Pad	B00-32 P116	Wood Block
B00-32 P13	Marimba	B00-32 P39	Synth Bass 1	B00-32 P65	Soprano Sax	B00-32 P91	Polysynth	B00-32 P117	Taiko
B00-32 P14	Xylophone	B00-32 P40	Synth Bass 2	B00-32 P66	Alto Sax	B00-32 P92	Space Voice	B00-32 P118	Melodic Tom
B00-32 P15	Tubular Bells	B00-32 P41	Violin	B00-32 P67	Tenor Sax	B00-32 P93	Bowed Glass	B00-32 P119	Synth Drum
B00-32 P16	Dulcimer	B00-32 P42	Viola	B00-32 P68	Baritone Sax	B00-32 P94	Metal Pad	B00-32 P120	Reverse Cymbal
B00-32 P17	Drawbar Organ	B00-32 P43	Cello	B00-32 P69	Oboe	B00-32 P95	Halo Pad	B00-32 P121	Gtr Fret Noise
B00-32 P18	Perc Organ	B00-32 P44	Contrabass	B00-32 P70	English Horn	B00-32 P96	Sweep Pad	B00-32 P122	Breath Noise
B00-32 P19	Rock Organ	B00-32 P45	Tremolo Strings	B00-32 P71	Bassoon	B00-32 P97	Ice Rain	B00-32 P123	Seashore
B00-32 P20	Church Organ	B00-32 P46	Pizz Strings	B00-32 P72	Clarinet	B00-32 P98	Soundtrack	B00-32 P124	Bird
B00-32 P21	Reed Organ	B00-32 P47	Harp	B00-32 P73	Piccolo	B00-32 P99	Crystal	B00-32 P125	Telephone
B00-32 P22	GM Accordion	B00-32 P48	Timpani	B00-32 P74	Flute	B00-32 P100	Atmosphere	B00-32 P126	Helicopter
B00-32 P23	Harmonica	B00-32 P49	Ensemble Strings	B00-32 P75	Recorder	B00-32 P101	Brightness	B00-32 P127	Applause
B00-32 P24	Bandoneon	B00-32 P50	GM Slow Strs	B00-32 P76	Pan Flute	B00-32 P102	Goblins	B00-32 P128	Gun Shot
B00-32 P25	Nylon Guitar	B00-32 P51	Synth Strings 1	B00-32 P77	Bottle Blow	B00-32 P103	Echo Drops		
B00-32 P26	Steel Str Gtr	B00-32 P52	Synth Strings 2	B00-32 P78	Shakuhachi	B00-32 P104	Star Theme		

B(Bank)の変更手順

1. FTSW"Edit"を長押し
2. KIT AUXILIARYをタップ
3. FORWARDを3回タップ
4. MSB、LSBをINCREMENT(+)、DECREMENT(-)で調整

P(Program)の変更手順

1. FTSW"Edit"を長押し
2. PROGRAMをタップ
3. カッコ内の数字をINCREMENT(+)、DECREMENT(-)で調整