

B00-00 P00	Grand Piano	B00-00 P26	Jazz	B00-00 P52	Choir Aah	B00-00 P78	Whistle	B00-00 P104	Sitar
B00-00 P01	Rock Piano	B00-00 P27	Clean	B00-00 P53	Voice Ooh	B00-00 P79	Ocarina	B00-00 P105	Banjo
B00-00 P02	Electric	B00-00 P28	Muted	B00-00 P54	Synth Voice	B00-00 P80	Square	B00-00 P106	Shamisen
B00-00 P03	Honky-tonk	B00-00 P29	Overdrive	B00-00 P55	Hits	B00-00 P81	Sawtooth	B00-00 P107	Koto
B00-00 P04	El. Piano1	B00-00 P30	Distorted	B00-00 P56	Trumpet	B00-00 P82	Caliope	B00-00 P108	Kalimba
B00-00 P05	El. Piano2	B00-00 P31	Harmonics	B00-00 P57	Trombone	B00-00 P83	Chiff	B00-00 P109	Bagpipe
B00-00 P06	Harpsochord	B00-00 P32	Acoustic	B00-00 P58	Tuba	B00-00 P84	Charang	B00-00 P110	Fiddle
B00-00 P07	Clavi	B00-00 P33	Finger	B00-00 P59	Muted Tpt	B00-00 P85	Voice	B00-00 P111	Shanai
B00-00 P08	Celesta	B00-00 P34	Picked	B00-00 P60	French Horn	B00-00 P86	Fifth	B00-00 P112	Tinkle Bell
B00-00 P09	Glockenspiel	B00-00 P35	Fretless	B00-00 P61	Brass Sect.	B00-00 P87	Bass&Lead	B00-00 P113	Agogo
B00-00 P10	MusicBox	B00-00 P36	Slap Bass1	B00-00 P62	SynBrass1	B00-00 P88	Fantasy	B00-00 P114	Steeldrum
B00-00 P11	Vibraphone	B00-00 P37	Slap Bass2	B00-00 P63	SynBrass2	B00-00 P89	Warm	B00-00 P115	Woodblock
B00-00 P12	Marimba	B00-00 P38	Synbas1	B00-00 P64	Altosoft	B00-00 P90	New Age	B00-00 P116	Taiko
B00-00 P13	Xylophone	B00-00 P39	Synbas2	B00-00 P65	Contralto	B00-00 P91	Space	B00-00 P117	Melotom
B00-00 P14	Tubular bells	B00-00 P40	Violin	B00-00 P66	TenorSax	B00-00 P92	Soft	B00-00 P118	Syntom
B00-00 P15	Dulcimer	B00-00 P41	Viola	B00-00 P67	Bariton Sax	B00-00 P93	Metal	B00-00 P119	Reverse
B00-00 P16	Rotary	B00-00 P42	Cello	B00-00 P68	Oboe	B00-00 P94	Halo	B00-00 P120	Fret Noise
B00-00 P17	Percussive	B00-00 P43	Contrabass	B00-00 P69	Engl.Horn	B00-00 P95	Sweep	B00-00 P121	Breath
B00-00 P18	Rock Organ	B00-00 P44	Tremolo	B00-00 P70	Bassoon	B00-00 P96	Ice Rain	B00-00 P122	Seashore
B00-00 P19	Church	B00-00 P45	Pizzicato	B00-00 P71	Clarinet	B00-00 P97	Soundtrack	B00-00 P123	Bird
B00-00 P20	Theatre	B00-00 P46	Harp	B00-00 P72	Piccolo	B00-00 P98	Crystal	B00-00 P1124	Telephone
B00-00 P21	Musette	B00-00 P47	Timpani	B00-00 P73	Flute	B00-00 P99	Atmosphere	B00-00 P125	Helicopter
B00-00 P22	Harmonica	B00-00 P48	Strings Ens.	B00-00 P74	Recorder	B00-00 P100	Brightness	B00-00 P126	Applause
B00-00 P23	Bandneon	B00-00 P49	SlowStrings	B00-00 P75	Pan Flute	B00-00 P101	Goblin	B00-00 P127	Gunshot
B00-00 P24	Nylon	B00-00 P50	SynStrings1	B00-00 P76	Bottle	B00-00 P102	Echodrops		
B00-00 P25	Steel	B00-00 P51	SynStrings2	B00-00 P77	Shakuhachi	B00-00 P103	Startheme		

B(Bank)の変更手順

1. FTSW"Edit"を長押し
2. KIT AUXILIARYをタップ
3. FORWARDを3回タップ
4. MSB、LSBをINCREMENT(+)、DECREMENT(-)で調整

P(Program)の変更手順

1. FTSW"Edit"を長押し
2. PROGRAMをタップ

B01-00 P00	Jinglw	B01-00 P26	Funk Strat	B01-00 P52	Men_Doo	B01-00 P78	Brightpad	B01-00 P104	Hawaian
B01-00 P01	Dark Grand	B01-00 P27	60' Stopped	B01-00 P53	Girl_Doo	B01-00 P79	Wiring	B01-00 P105	Mandolin
B01-00 P02	House	B01-00 P28	Muted velo	B01-00 P54	Laah	B01-00 P80	Wow	B01-00 P106	Django
B01-00 P03	Suitcase	B01-00 P29	Vintage	B01-00 P55	Voices	B01-00 P81	Polysynth	B01-00 P107	DlassicFx
B01-00 P04	Mark	B01-00 P30	12 Strings	B01-00 P56	Swing Tpt	B01-00 P82	Trance	B01-00 P108	Pedalsteel
B01-00 P05	Funk Dx	B01-00 P31	Solidbody	B01-00 P57	cornet	B01-00 P83	Wave	B01-00 P109	Rock&Roll
B01-00 P06	Fm Tine	B01-00 P32	WarmBass	B01-00 P58	Euphonium	B01-00 P84	RaveBass	B01-00 P110	Reed 8'
B01-00 P07	DX Piano	B01-00 P33	Folk Bass	B01-00 P59	Mules Tpt	B01-00 P85	Modular Bass	B01-00 P111	Fisa 8'
B01-00 P08	ToyPad	B01-00 P34	MuteBass	B01-00 P60	Flughorn	B01-00 P86	Percussive Bass	B01-00 P112	Gategroup
B01-00 P09	Orch. Bell	B01-00 P35	Deep Bass	B01-00 P61	Stereo Brass	B01-00 P87	Wild Bass	B01-00 P113	Amazing
B01-00 P10	Mallet	B01-00 P36	Precision	B01-00 P62	GrowBrass	B01-00 P88	2nd Perc	B01-00 P114	Housesynth
B01-00 P11	Short Vibe	B01-00 P37	Reso Bass	B01-00 P63	OctaBrass	B01-00 P89	3rd Perc	B01-00 P115	Resonance
B01-00 P12	Karimba	B01-00 P38	Saw Bass	B01-00 P64	Soprano	B01-00 P90	Power Fast	B01-00 P116	Key Lead
B01-00 P13	Etnowood	B01-00 P39	House Bass	B01-00 P65	Circus Sax	B01-00 P91	Tonebar	B01-00 P117	Juno Synth
B01-00 P14	Metallophone	B01-00 P40	Philharmonic	B01-00 P66	Lounge Tenor	B01-00 P92	Dark B3	B01-00 P118	Obx Poly
B01-00 P15	Windchimes	B01-00 P41	Quartet	B01-00 P67	Growl Sax	B01-00 P93	Jimmy Org.	B01-00 P119	JX Brass
B01-00 P16	Rotor Fast	B01-00 P42	GlockString	B01-00 P68	Melo Trumpet	B01-00 P94	Lower 8' - 4'	B01-00 P120	Alarm&Sirene
B01-00 P17	Jazz Organ	B01-00 P43	OctaStrings1	B01-00 P69	Horn Swell	B01-00 P95	Jazzy	B01-00 P121	Jet
B01-00 P18	Drawbar	B01-00 P44	OctaStrings2	B01-00 P70	Trumpets	B01-00 P96	Pop Strat	B01-00 P122	Pfif&Jew_Harp
B01-00 P19	Positive	B01-00 P45	Marcato	B01-00 P71	Soft Trombones	B01-00 P97	Telecast	B01-00 P123	Rain
B01-00 P20	French Musette	B01-00 P46	Strings&Fall	B01-00 P72	Latin Flute	B01-00 P98	Strato	B01-00 P1124	Vocals
B01-00 P21	Francaise	B01-00 P47	Slow Arcos	B01-00 P73	Pop Flute	B01-00 P99	Texas	B01-00 P125	Thunder
B01-00 P22	Cassotto	B01-00 P48	Bowed Srings	B01-00 P74	Andes	B01-00 P100	Western	B01-00 P126	Train
B01-00 P23	Tango	B01-00 P49	Dark Strings	B01-00 P75	Voice Flute	B01-00 P101	Fingerpick	B01-00 P127	Sweep
B01-00 P24	Classic	B01-00 P50	Dah	B01-00 P76	Analogs	B01-00 P102	5th Stops		
B01-00 P25	Folk	B01-00 P51	Classic Choir	B01-00 P77	Flanger	B01-00 P103	Wha Guitar		

B(Bank)の変更手順

1. FTSW"Edit"を長押し
2. KIT AUXILIARYをタップ
3. FORWARDを3回タップ
4. MSB、LSBをINCREMENT(+)、DECREMENT(-)で調整

P(Program)の変更手順

1. FTSW"Edit"を長押し
2. PROGRAMをタップ

B10-00 P00	Piano&Strings	B10-00 P26	Humbuck	B10-00 P52	Tuuh	B10-00 P78	Staccato Whistle	B10-00 P104	Tres
B10-00 P01	Grand&Pad	B10-00 P27	StratoFx	B10-00 P53	Ooh Girls	B10-00 P79	Pipe	B10-00 P105	Banjo 5String
B10-00 P02	Octapiano	B10-00 P28	Ac. Stereo	B10-00 P54	Aah Girls	B10-00 P80	Solo Dance	B10-00 P106	Futozao
B10-00 P03	Electropad	B10-00 P29	Acid	B10-00 P55	Choir	B10-00 P81	Juicy	B10-00 P107	Hackbrett
B10-00 P04	Msk	B10-00 P30	Plucked	B10-00 P56	Tbones&Cornet	B10-00 P82	Drama	B10-00 P108	Paraguayan Harp
B10-00 P05	StagePno	B10-00 P31	Flamenco	B10-00 P57	Slide Trombone	B10-00 P83	Odissey	B10-00 P109	Short Mandolin
B10-00 P06	Rodes	B10-00 P32	Acoustic Bass	B10-00 P58	Dixie Tpt	B10-00 P84	Minimug	B10-00 P110	Harp Glissando
B10-00 P07	Elopiano	B10-00 P33	Bass&Guit1	B10-00 P59	Open Horn	B10-00 P85	Attack	B10-00 P111	Bouzuki
B10-00 P08	FM Layer	B10-00 P34	Oberbas1	B10-00 P60	Brass Fall Off	B10-00 P86	Phantom	B10-00 P112	Tinlles
B10-00 P09	Chinese Bell	B10-00 P35	ResroBass	B10-00 P61	Horn Pad	B10-00 P87	Soloist	B10-00 P113	Triangle
B10-00 P10	Stereochrom	B10-00 P36	Fusion	B10-00 P62	Multi Brass	B10-00 P88	Warmness	B10-00 P114	Tambora
B10-00 P11	Bright Vibes	B10-00 P37	Oberbas2	B10-00 P63	Brass Cool	B10-00 P89	Explorer	B10-00 P115	Claves
B10-00 P12	Toy Box	B10-00 P38	Pedalbass	B10-00 P64	Altosax	B10-00 P90	Choral	B10-00 P116	Ac. Tom
B10-00 P13	Mbira	B10-00 P39	Bass&Guit2	B10-00 P65	Jazz Alto	B10-00 P91	Cyber	B10-00 P117	Brushom
B10-00 P14	Xmas Bell	B10-00 P40	Slow Viloin	B10-00 P66	Alto Straight	B10-00 P92	Magic	B10-00 P118	Snare
B10-00 P15	FM Marimba	B10-00 P41	Electric Violin	B10-00 P67	Rock Sax	B10-00 P93	Glockpad	B10-00 P119	Crash
B10-00 P16	Pop Organ	B10-00 P42	Chamber	B10-00 P68	Superhorn	B10-00 P94	Stream	B10-00 P120	Scratch1
B10-00 P17	Gospel	B10-00 P43	Tzivago	B10-00 P69	Tpt Slide Up	B10-00 P95	Digi Pro	B10-00 P121	Scratch2
B10-00 P18	Power Slow	B10-00 P44	Staccato	B10-00 P70	Dry Trumpet	B10-00 P96	UsPad	B10-00 P122	Scratch3
B10-00 P19	Principale	B10-00 P45	String Fall	B10-00 P71	Trumpet Section	B10-00 P97	Bottled Air	B10-00 P123	Scratch4
B10-00 P20	Dry Organ	B10-00 P46	Harp&Orchestra	B10-00 P72	Open Trombones	B10-00 P98	Bellvox	B10-00 P1124	Scratch5
B10-00 P21	Alpen	B10-00 P47	Symphony	B10-00 P73	Irish Flute	B10-00 P99	DigiPad	B10-00 P125	FxSlap
B10-00 P22	Bellow	B10-00 P48	Full Ensemble	B10-00 P74	Staccato Flute	B10-00 P100	Syntax	B10-00 P126	Laser
B10-00 P23	Steirisch	B10-00 P49	Digistring	B10-00 P75	Asian Flute	B10-00 P101	Bright Analog	B10-00 P127	Wind
B10-00 P24	DynaFolk	B10-00 P50	Disco Strings	B10-00 P76	Fiffe	B10-00 P102	Aura Pad		
B10-00 P25	CountryFx	B10-00 P51	Country Violin	B10-00 P77	Ethinc Flute	B10-00 P103	Acoustic Dream		

B(Bank)の変更手順

1. FTSW"Edit"を長押し
2. KIT AUXILIARYをタップ
3. FORWARDを3回タップ
4. MSB、LSBをINCREMENT(+)、DECREMENT(-)で調整

P(Program)の変更手順

1. FTSW"Edit"を長押し
2. PROGRAMをタップ

B11-00 P00	Layerd Piano	B11-00 P26	Jazz Octave	B11-00 P52	Lah Choir	B11-00 P78	Finger Slap	B11-00 P104	Southern Harp
B11-00 P01	Latin Piano	B11-00 P27	Muted Wha	B11-00 P53	Lah Mello Choir	B11-00 P79	Planet	B11-00 P105	Ungarian Zither
B11-00 P02	Fm Thin	B11-00 P28	Rock Strat	B11-00 P54	Church Choir	B11-00 P80	Rock Synth	B11-00 P106	Alpen Choir
B11-00 P03	Rdx Operator	B11-00 P29	Str Power	B11-00 P55	Night Vocals	B11-00 P81	Chuck	B11-00 P107	Mallet World
B11-00 P04	Twin Electro	B11-00 P30	Valve Lead	B11-00 P56	Mmh	B11-00 P82	Smooth Lead	B11-00 P108	Countryt&Western
B11-00 P05	Stage Mix	B11-00 P31	Smooth Electro	B11-00 P57	Boom&Uap	B11-00 P83	Synth Plug	B11-00 P109	StereoFolk
B11-00 P06	Huge FM	B11-00 P32	Strat&Folk	B11-00 P58	Horn Crescendo	B11-00 P84	Subbass	B11-00 P110	Alpen Choir
B11-00 P07	Digitine	B11-00 P33	Open Country	B11-00 P59	Emperor Brass	B11-00 P85	Synvoice	B11-00 P111	Jazz Accordion
B11-00 P08	Glasshouse	B11-00 P34	Golden Steel	B11-00 P60	Dry Tenor	B11-00 P86	Deep Jazz	B11-00 P112	Bright Musette
B11-00 P09	Fantasyland	B11-00 P35	Cntry Detune	B11-00 P61	Sax Club	B11-00 P87	Memory Synth	B11-00 P113	335 Jazz
B11-00 P10	Italian Positive	B11-00 P36	Accoust. Picking	B11-00 P62	Swing Tenor	B11-00 P88	Evolution	B11-00 P114	Smooth_Bass
B11-00 P11	Principale&Octave	B11-00 P37	Twin Folk	B11-00 P63	Baritone	B11-00 P89	Sideral	B11-00 P115	Funky Muted
B11-00 P12	Full Organ	B11-00 P38	Gipsy	B11-00 P64	Glenn Sax	B11-00 P90	North Wire	B11-00 P116	Country Gtr
B11-00 P13	ChorusB3	B11-00 P39	Brazillian	B11-00 P65	Boogie Sax	B11-00 P91	Blowing	B11-00 P117	Nylon_Slide
B11-00 P14	Hot Organ	B11-00 P40	Rockabilly	B11-00 P66	Octasax	B11-00 P92	Aural	B11-00 P118	Power Guilt
B11-00 P15	16-8-5	B11-00 P41	Funk Bass	B11-00 P67	Countie Sax	B11-00 P93	Velvet	B11-00 P119	Clean Chorus
B11-00 P16	Pipe Octave	B11-00 P42	Maxipick	B11-00 P68	Sax Section	B11-00 P94	Ethnovox	B11-00 P120	Tremolo Mark
B11-00 P17	Tonewheel	B11-00 P43	Ooh Mix	B11-00 P69	Saxes	B11-00 P95	Whisper	B11-00 P121	Phase Electro
B11-00 P18	Movie Organ	B11-00 P44	Duh Group	B11-00 P70	Billy Sax	B11-00 P96	Evopad	B11-00 P122	Organ Overdrive
B11-00 P19	Fast Drawbars	B11-00 P45	Dah Quartet	B11-00 P71	Pop Sax	B11-00 P97	Plucking	B11-00 P123	Metal
B11-00 P20	Carousel Org	B11-00 P46	Lah Trio	B11-00 P72	Lute	B11-00 P98	Mallt Area	B11-00 P1124	Distorted
B11-00 P21	Diatonic	B11-00 P47	Vocal_Praise	B11-00 P73	Mandola	B11-00 P99	80's Pad	B11-00 P125	Crunch
B11-00 P22	Blues Harp	B11-00 P48	Coinema Strings	B11-00 P74	Latin Harp	B11-00 P100	Fluty Pad	B11-00 P126	Jaz Combo
B11-00 P23	Conservatory	B11-00 P49	Score	B11-00 P75	Portuguese	B11-00 P101	Nylon Theme	B11-00 P127	Echolead
B11-00 P24	Classic Bright	B11-00 P50	AahMix	B11-00 P76	Fingered&Slide	B11-00 P102	Bottled Choir		
B11-00 P25	Thin Folk	B11-00 P51	Humming	B11-00 P77	Fingerd Gtr	B11-00 P103	Brass Hits		

B(Bank)の変更手順

1. FTSW"Edit"を長押し
2. KIT AUXILIARYをタップ
3. FORWARDを3回タップ
4. MSB、LSBをINCREMENT(+)、DECREMENT(-)で調整

P(Program)の変更手順

1. FTSW"Edit"を長押し
2. PROGRAMをタップ

BNO-NO P00	Standard 1 (SD)	BNO-NO P26	Techno	BNO-NO P52	Dance 1
BNO-NO P01	Standard 2 (SD)	BNO-NO P27	House 1	BNO-NO P53	Dance 2
BNO-NO P02	Standard 1	BNO-NO P28	House 2	BNO-NO P54	Street
BNO-NO P03	Standard 2 (SD)	BNO-NO P29	Rap (SD)	BNO-NO P55	R&B
BNO-NO P04	-	BNO-NO P30	Hip hop 1	BNO-NO P56	-
BNO-NO P05	-	BNO-NO P31	-	BNO-NO P57	Contemporary
BNO-NO P06	-	BNO-NO P32	Heavy_Pop(SD)	BNO-NO P58	Analog 1
BNO-NO P07	Room	BNO-NO P33	Heavy_Pop	BNO-NO P59	Analog 2
BNO-NO P08	Folk (SD)	BNO-NO P34	Electro	BNO-NO P60	New Soul
BNO-NO P09	Acoustic (SD)	BNO-NO P35	Hip Hop 2	BNO-NO P61	Garage
BNO-NO P10	Jazz (SD)	BNO-NO P36	-	BNO-NO P62	Vocal 1
BNO-NO P11	Studio	BNO-NO P37	-	BNO-NO P63	Vocal 2
BNO-NO P12	Folk	BNO-NO P38	-		
BNO-NO P13	Acoustic	BNO-NO P39	-		
BNO-NO P14	Jazz	BNO-NO P40	Swing (SD)		
BNO-NO P15	-	BNO-NO P41	Brush 1 (SD)		
BNO-NO P16	Rock 1	BNO-NO P42	Brush 2		
BNO-NO P17	Rock 2	BNO-NO P43	Swing (SD)		
BNO-NO P18	-	BNO-NO P44	Brush 1		
BNO-NO P19	-	BNO-NO P45	-		
BNO-NO P20	-	BNO-NO P46	-		
BNO-NO P21	-	BNO-NO P47	-		
BNO-NO P22	Disco 1	BNO-NO P48	Orchestra		
BNO-NO P23	Disco 2	BNO-NO P49	Latin (SD)		
BNO-NO P24	Houaw (SD)	BNO-NO P50	Light Pop		
BNO-NO P25	Techno (SD)	BNO-NO P51	Industrial		

B(Bank)の変更手順

1. FTSW"Edit"を長押し
2. KIT AUXILIARYをタップ
3. FORWARDを3回タップ
4. MSB、LSBをINCREMENT(+)、DECREMENT(-)で調整

P(Program)の変更手順

1. FTSW"Edit"を長押し
2. PROGRAMをタップ

B04-00 P00	Afro_1	B04-00 P26	Bossa_Shaker	B04-00 P52	Conga_1_t	B04-00 P78	Cumbia_a	B04-00 P104	Flamenco_f
B04-00 P01	Afro_2	B04-00 P27	Brush_1_t	B04-00 P53	Conga_2_t	B04-00 P79	Cumbia_b	B04-00 P105	Flamenco_g
B04-00 P02	Afro_3	B04-00 P28	Brush_fast	B04-00 P54	Conga_3_t	B04-00 P80	Cumbia_c	B04-00 P106	Gipsy_1
B04-00 P03	Afro_4	B04-00 P29	Brush_medium	B04-00 P55	Conga_4_t	B04-00 P81	Cumbia_d	B04-00 P107	Gipsy_2
B04-00 P04	Afro_5	B04-00 P30	Brush_slow1	B04-00 P56	Conga_5_t	B04-00 P82	Cumbia_e	B04-00 P108	Guajira_a
B04-00 P05	Bachata_a	B04-00 P31	Brush_slow2	B04-00 P57	Conga_6_t	B04-00 P83	Dance_1	B04-00 P109	Guajira_b
B04-00 P06	Bachata_b	B04-00 P32	Brush_slow3	B04-00 P58	Conga_7_t	B04-00 P84	Dance_2	B04-00 P110	Guira_1
B04-00 P07	Bachata_c	B04-00 P33	Brush_slow4	B04-00 P59	Conga_ballad	B04-00 P85	Dance_3	B04-00 P111	Guira_2
B04-00 P08	Bachata_d	B04-00 P34	Cabaza_1	B04-00 P60	Conga_bolero1	B04-00 P86	Dance_4	B04-00 P112	Guira_bachat1
B04-00 P09	Batucada_a	B04-00 P35	Cabaza_2	B04-00 P61	Conga_bolero2	B04-00 P87	Dance_5	B04-00 P113	Guira_bachat2
B04-00 P10	Batucada_b	B04-00 P36	Cabaza_3	B04-00 P62	Conga_bossa	B04-00 P88	Dance_6	B04-00 P114	Guira_mereng1
B04-00 P11	Bluegrass	B04-00 P37	Cabaza_4	B04-00 P63	Conga_cha1	B04-00 P89	Dance_7	B04-00 P115	Guira_mereng2
B04-00 P12	Bolero_a	B04-00 P38	Cajon	B04-00 P64	Conga_cha2	B04-00 P90	Dance_8	B04-00 P116	Guira_cha
B04-00 P13	Bolero_b	B04-00 P39	Chacha_a	B04-00 P65	Conga_manbo	B04-00 P91	Dance_kick1a	B04-00 P117	Guira_cumbia
B04-00 P14	Bolero_c	B04-00 P40	Chahcha_b	B04-00 P66	Conga_mereng1	B04-00 P92	Dance_kick2a	B04-00 P118	Guira_mereng
B04-00 P15	Bongo_1_t	B04-00 P41	Chacha_c	B04-00 P67	Conga_mereng2	B04-00 P93	Dance_kick3a	B04-00 P119	Guira_salsa
B04-00 P16	Bongo_bachat1	B04-00 P42	Chacha_d	B04-00 P68	Conga_rumba	B04-00 P94	Dance_kick4a	B04-00 P120	Hihat 8_1
B04-00 P17	Bongo_bachat2	B04-00 P43	Chacha_e	B04-00 P69	Conga_salsa1	B04-00 P95	Dance_kick5a	B04-00 P121	Hihat 8_2
B04-00 P18	Bongo_bolero1	B04-00 P44	Chacha_f	B04-00 P70	Conga_salsa2	B04-00 P96	Dance_kick6a	B04-00 P122	Hihat16_1
B04-00 P19	Bongo_bolero2	B04-00 P45	Clap_2_4	B04-00 P71	Conga_salsa3	B04-00 P97	Dance_kick7a	B04-00 P123	Hihat 16_2
B04-00 P20	Bongo_cha	B04-00 P46	Clap_4_4	B04-00 P72	Conga_samba_1	B04-00 P98	Dance_kick8a	B04-00 P124	Hihat swing1
B04-00 P21	Cbongo_salsa	B04-00 P47	Clap_6_8	B04-00 P73	Conga_samba_2	B04-00 P99	Flamenco_a	B04-00 P125	Hihat swing2
B04-00 P22	Bossa_a	B04-00 P48	Clap_Dance	B04-00 P74	Cowbell_salsa1	B04-00 P100	Flamenco_b	B04-00 P126	Hihat swing3
B04-00 P23	Bossa_b	B04-00 P49	Clap_Gipsy1	B04-00 P75	Cowbell_salsa2	B04-00 P101	Flamenco_c	B04-00 P127	Hihat_shuffle1
B04-00 P24	Bossa_c	B04-00 P50	Clap_Gipsy2	B04-00 P76	Cowbell_cha1	B04-00 P102	Flamenco_d	B04-00 P128	Hihat_shuffle2
B04-00 P25	Bossa_Cabasa	B04-00 P51	C;ap_Shuffle	B04-00 P77	Cowbell_cha2	B04-00 P103	Flamenco_e	B04-00 P129	Hiphop_1

B(Bank)の変更手順

1. FTSW"Edit"を長押し
2. KIT AUXILIARYをタップ
3. FORWARDを3回タップ
4. MSB、LSBをINCREMENT(+)、DECREMENT(-)で調整

P(Program)の変更手順

1. FTSW"Edit"を長押し
2. PROGRAMをタップ

B04-00 P130	Hiphop_2	B04-00 P156	Marac_bolero3	B04-00 P182	Popdown_b	B04-00 P208	Salsa_e	B04-00 P234	Tambora
B04-00 P131	House_1	B04-00 P157	Marac_bossa	B04-00 P183	Popfunk_a	B04-00 P209	Salsa_f	B04-00 P235	Tambourine_8_1
B04-00 P132	House_2	B04-00 P158	Marac_cha	B04-00 P184	Popfunk_b	B04-00 P210	Salsa_g	B04-00 P236	Tambourine_8_2
B04-00 P133	House_3	B04-00 P159	Marac_cumbia	B04-00 P185	Popjazz_a	B04-00 P211	Samba_a	B04-00 P237	Tambourine_8_3
B04-00 P134	House_4	B04-00 P160	Marac_mereng	B04-00 P186	Popjazz_b	B04-00 P212	Samba_b	B04-00 P238	Tambourine_12_1
B04-00 P135	House_5	B04-00 P161	Marac_sa;sa1	B04-00 P187	Popjazz_c	B04-00 P213	Samba_c	B04-00 P239	Tambourine_12_2
B04-00 P136	House_6	B04-00 P162	Marac_salsa2	B04-00 P188	Popjazz_d	B04-00 P214	Samba_Cabasa	B04-00 P240	Tambourine_16_1
B04-00 P137	House_7	B04-00 P163	Maracas_1	B04-00 P189	Popjazz_e	B04-00 P215	Samba_d	B04-00 P241	Tambourine_16_2
B04-00 P138	House_8	B04-00 P164	Maracas_1_t	B04-00 P190	Popjazz_f	B04-00 P216	Samba_Shaker	B04-00 P242	Tambourine_16_3
B04-00 P139	House_kick1a	B04-00 P165	Maracas_2	B04-00 P191	R&blues_a	B04-00 P217	Shaker_1	B04-00 P243	Tambourine_16t
B04-00 P140	House_kick2a	B04-00 P166	Maracas_2_t	B04-00 P192	R&blues_b	B04-00 P218	Shaker_1_t	B04-00 P244	Tambourine_24
B04-00 P141	House_kick3a	B04-00 P167	Maracas_3	B04-00 P193	R&blues_c	B04-00 P219	Shaker_2	B04-00 P245	Tambourine_shuffle
B04-00 P142	House_kick4a	B04-00 P168	Maracas_4	B04-00 P194	Rap	B04-00 P220	Shaker_2_t	B04-00 P246	Triplet
B04-00 P143	House_kick5a	B04-00 P169	Maracas_5	B04-00 P195	Reels	B04-00 P221	Shaker_3	B04-00 P247	Urban
B04-00 P144	House_kick6a	B04-00 P170	Merengue_a	B04-00 P196	Reide_1_t	B04-00 P222	Shaker_4		
B04-00 P145	House_kick7a	B04-00 P171	Merengue_b	B04-00 P197	Ride_fast1	B04-00 P223	Shaker_5		
B04-00 P146	Jazzrock_a	B04-00 P172	Merengue_c	B04-00 P198	Ride_fast2	B04-00 P224	Shaker_6		
B04-00 P147	Jazzrpkc_b	B04-00 P173	Merengue_d	B04-00 P199	Ride_medium	B04-00 P225	Shuffle_a		
B04-00 P148	Jigs	B04-00 P174	Merengue_e	B04-00 P200	Ride_shuffle	B04-00 P226	Shuffle_b		
B04-00 P149	Latin_dance1	B04-00 P175	Merengue_f	B04-00 P201	Ride?slow	B04-00 P227	Shuffle_c		
B04-00 P150	Latin_dance2	B04-00 P176	Pandero_1	B04-00 P202	Rock_a	B04-00 P228	Snap		
B04-00 P151	Mambo_a	B04-00 P177	Pandero_2	B04-00 P203	Rock_b	B04-00 P229	Street_1		
B04-00 P152	Mambo_b	B04-00 P178	Pandero_1_t	B04-00 P204	Salsa_a	B04-00 P230	Sterrt_2		
B04-00 P153	Mambo_c	B04-00 P179	Pandero_2_t	B04-00 P205	Salsa_b	B04-00 P231	Swing_a		
B04-00 P154	Marac_bolero1	B04-00 P180	Pasodoble	B04-00 P206	Salsa_c	B04-00 P232	Swing_b		
B04-00 P155	Marac_bolero2	B04-00 P181	Popdown_a	B04-00 P207	Salsa_d	B04-00 P233	Swing_c		

B(Bank)の変更手順

1. FTSW"Edit"を長押し
2. KIT AUXILIARYをタップ
3. FORWARDを3回タップ
4. MSB、LSBをINCREMENT(+)、DECREMENT(-)で調整

P(Program)の変更手順

1. FTSW"Edit"を長押し
2. PROGRAMをタップ

